



- 1 spool cover
- 2 spool
- 3 main shaft pin
- 4 main shaft
- 5 pinion gear cap
- 6 pinion gear cap fixed screw
- 7 rotor
- 8 line roller screw
- 9 bail arm
- 10 line roller bushing
- 11 line roller ball bearing
- 12 line roller
- 13 line roller shaft
- 14 bail line
- 15 bail holder
- 16 bail holder screw
- 17 bail holder cover
- 18 bail holder cover screw(1)
- 19 bail holder cover screw(2)
- 20 bail arm screw
- 21 bail trip lever
- 22 spring seat lever
- 23 lever spring
- 24 lever spring seat
- 25 bail arm cover
- 26 bail arm cover screw
- 27 rotor washer
- 28 one-way clutch fixed screw

- 29 one-way clutch ball bearing fixed plate
- 30 pinion gear ball bearing
- 31 ball bearing bushing
- 32 one-way clutch ball bearing
- 33 one-way clutch ball bearing spring
- 34 inner ring
- 35 pinion gear
- 36 anti-reverse lever
- 37 anti-reverse switch
- 38 anti-reverse switch screw
- 39 anti-reverse switch spring
- 40 body
- 41 handle screw cap
- 42 teeth washer
- 43 hexagonal washer
- 44 body ball bearing
- 45 driver gear
- 46 body cover ball bearing
- 47 oscillation gear ball bearing
- 48 oscillation gear
- 49 oscillation slider
- 50 oscillation slider fasten
- 51 oscillation slider screw
- 52 body cover
- 53 body cover screw
- 54 handle assembly

- 57 washer
- 58 rear drag knob click gear
- 59 rear drag knob stop washer
- 60 rear drag knob eared washer
- 61 rear drag knob key washer
- 62 rear drag knob stop spring
- 63 rear drag knob stop screw
- 64 rear drag knob stop switch
- 65 rear drag knob retainer
- 66 rear drag knob decorated collar

- drag knob assembly
- 101 spool cover button
- 102 spool cover button
- 103 E-shape ring

- spool assembly
- 201 spool
- 201 line hook
- 203 line hook copper needle