


# ■ EXPLODED VIEW

3000/4000/5000

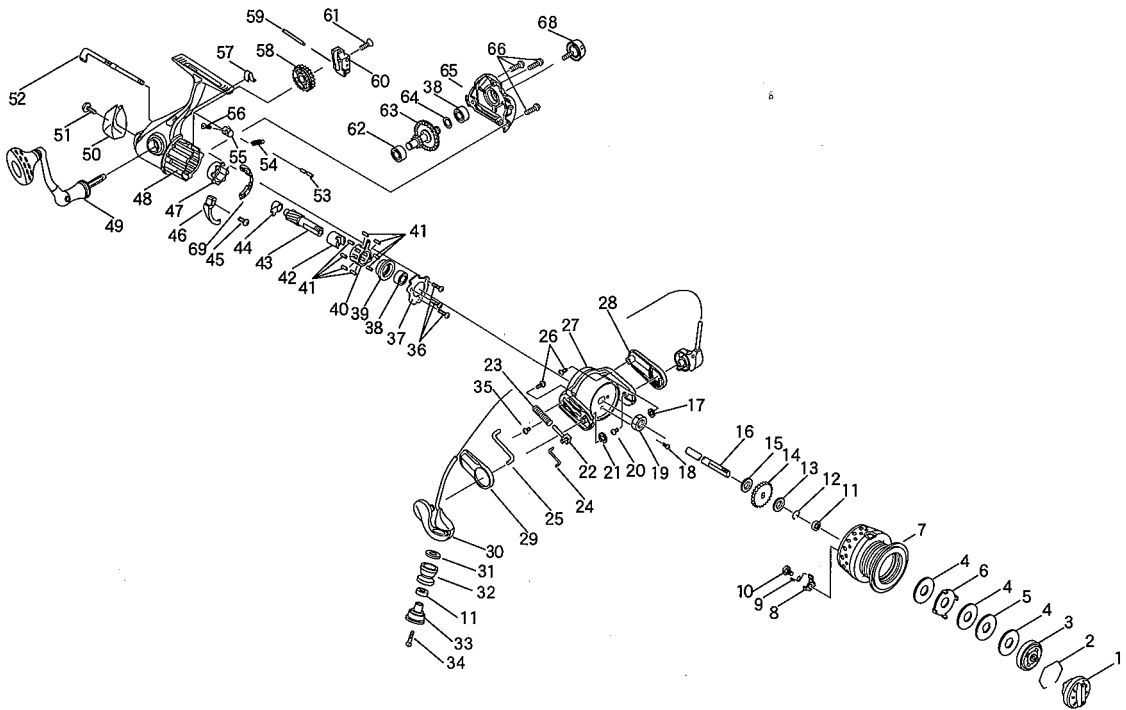

## ■ PARTS LIST

NO.	PARTS NO.	PARTS NAME	NO.	PARTS NO.	PARTS NAME	NO.	PARTS NO.	PARTS NAME
1	0232198	DRAG KNOB ASSY.	25	15687	KICK LEVER(3000)	44	16359	BUSH
2	42081	STOPPER SPRING		15692	KICK LEVER(4000 5000)	45	20637	SCREW
3	0268514A	CLICK PLATE ASSY.	26	20400	SCREW	46	68524	KICK CAM
4	26440	DRAG WASHER		05263	ROTOR(3000)	47	68449	OUTER RING
5	26437	DRAG WASHER	27	05264	ROTOR(4000)	48	0203359A	MAIN BODY ASSY.
6	26438	DRAG WASHER		052001	ROTOR(5000)	49	0207380C	HANDLE ASSY.
7	02062551	SPOOL ASSY.(3000)	28	41536	COVER B(3000)	50	41532	PROTECTOR
	02062552	SPOOL ASSY.(4000)		41541	COVER B(4000)	51	20056D	SCREW
	02062566	SPOOL ASSY.(5000)		412002	COVER B(5000)	52	15684	ANTI-REVERSE LEVER
8	33327	CLICK CLAW		41535	COVER A(3000)	53	23349	SPRING PIN
9	67108	CLICK CLAW SPRING	29	41540	COVER A(4000)	54	67107	ONE WAY CLUTCH SPRING
10	21157	CLICK CLAW SCREW		412001	COVER A(5000)	55	14353	ANTI-REVERSE CAM
11	38248	BALL BEARING	30	0229361	BAIL ARM ASSY.(3000)	56	20632	SCREW
12	42077	STOPPER RING		0229365	BAIL ARM ASSY.(4000)	57	67117	ANTI-REVERSE SPRING
13	27453B	CLICK WASHER		02292360	BAIL ARM ASSY.(5000)	58	10475	BULL GEAR(3000)
14	13119	CLICK	31	27704	WASHER		10488	BULL GEAR(4000 5000)
15	27694	SPOOL WASHER	32	25096	ROLLER	59	34033	OSCILLATOR GUIDE SHAFT
16	34031	SHAFT(3000)	33	68518	ROLLER HOLDER	60	11158	OSCILLATOR
	34046	SHAFT(4000 5000)	34	20633	SCREW	61	20383A	SCREW
17	27723	WASHER(3000)	35	20637	SCREW	62	38059	BALL BEARING
	27686	WASHER(4000 5000)	36	20610	SCREW	63	08282	MAIN GEAR
18	20635	SCREW	37	30162	BEARING SUPPORT	64	27290A	WASHER
19	18035	HEXAGON NUT	38	38049	BALL BEARING	65	04504	SIDE PLATE
20	20634	SCREW	39	17435	BALL BEARING COLLAR	66	20559	SCREW
21	42021	STOPPER RING	40	68517	HOLDER	68	0219477	HANDLE CAP ASSY.
22	68513	SLIDER	41	25089	ROLLER	69	49056	CONTROL PLATE
23	67145	DEAD POINT SPRING	42	17413	INNER RING			
24	68519	LINK	43	09333	PINION GEAR			